



HUS135RET REFRIGERATOR WITH FREEZER COMPARTMENT



To ensure safe operation, please read this instruction manual thoroughly before use.

Please retain for future reference.

Husky reserve the right due to possible changes to design to alter the instruction manual without notice.

CONTENTS

Important safety instructions.....	3-4
Product illustration.....	5
Transport and handing.....	6
Installation.....	6
Test.....	6
Temperature control.....	6
Storage of food.....	6
Defrosting	7
General instructions for care and maintenance	7
Troubleshooting.....	8
Technical specifications	9
Notes	10-11

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT: THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!

Please read these instructions carefully before the first use of this product and save this manual for future reference.



When using an electrical appliance, basic precautions should always be followed, including the following:

- Check that the voltage of the power supply in your home is the same as the voltage shown on the rating label of this product
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision
- **WARNING:** Keep ventilation opening, clear of obstruction
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer
- **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer
- **WARNING:** Do not damage the refrigerant circuit
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person
- It is recommended to check regularly the supply cord for any sign of possible deterioration, and the appliance should not be used if the cable is damaged
- To avoid injury or death from electrical shock, do not operate the appliance with wet hands, while standing on a wet surface
- It is not recommended to use this refrigerator with an extension cord or power board. Please ensure that the appliance is plugged directly into the electrical outlet
- When positioning the appliance, ensure that there is at least a 5cm clearance at the sides and a 10cm clearance at the back as this is the main outlet for heat. This will allow for adequate ventilation
- Do not place hot food or drink into the refrigerator
- Close the door immediately after putting in any items so the inside temperature will not rise
- Keep appliance away from any heat source or direct sunlight
- To fix stably, the appliance must be placed on a flat and solid surface. It should not be laid on any soft material
- Do not place any other appliance on top of the refrigerator
- Do not use outdoors or in wet conditions
- Never pull the cord to disconnect it from the outlet. Grasp the plug and pull it from the outlet
- Keep the cord away from heated surfaces.

IMPORTANT SAFETY INSTRUCTIONS

 
- This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed
- Connect your freezer to an independent electrical socket and use a safe ground wire
- When the frost in freezer is removed, when there is no electricity or when freezer ceases to be used, it should be cleaned in order to prevent it from smelling
- Defrost the freezer at least once a month because too much frost may affect refrigeration
- Turn on electricity only 5 minutes later after electricity goes off. Otherwise, the compressor may be damaged
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system
- Ensure the refrigerator is unplugged before cleaning or that the product is not in use
- To clean the appliance use only mild detergents or glass cleaning products. Never use harsh detergents or solvents
- Regarding the information pertaining to the installation, handing, maintenance, servicing and disposal of the appliance, refer to the below
- Always handle the appliance carefully to avoid any damage
- Disposal of the appliance. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.
Old refrigerators can contain CFC that destroy the ozone; contact the waste treatment centre nearest your home for more details on the correct procedures for disposal
- Don't try to replace or repair any components by yourself, ask the service agency for help if necessary
- This appliance is intended to be used in household and similar applications
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance




- **Warning:** Risk of fire / flammable materials
- **Warning:** When positioning the appliance, ensure the supply cord is not trapped or damaged
- **Warning:** Do not place multiple portable socket-outlets or portable power supplies at the rear of the appliance
- To avoid contamination of food, please respect the following instructions:
 - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance
 - Clean regularly surfaces that can come in contact with food and accessible drainage systems
 - Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drips onto other food
 - Frozen-food compartments are suitable for storing pre-frozen food, ice-cream and ice cubes
 - If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

WARNING: THE METAL RAILS ON THE EXTERNAL UNDERNEATH OF THIS APPLIANCE MAY HAVE SHARP EDGES, SO ALWAYS UNPACK AND HANDLE WITH CARE.

DO NOT DRAG THE APPLIANCE: PLACE CAREFULLY IN POSITION TO AVOID THE SCRATCHING OF SURFACES.

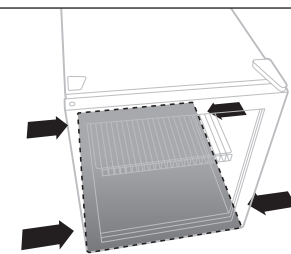

PRODUCT ILLUSTRATION

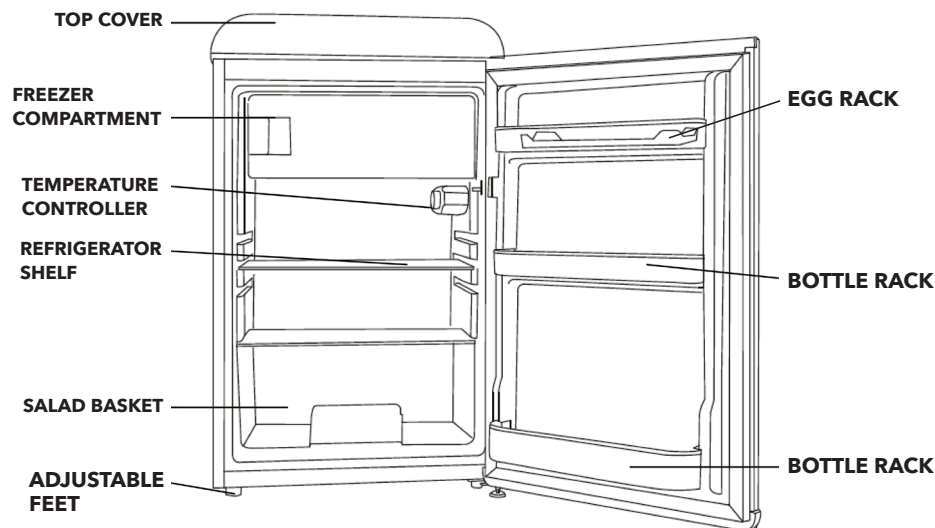 

TRANSPORT AND HANDING

When transporting, hold the base and lift the refrigerator carefully with an angle less than 45 degree. Never hold the door handle as support. Never place it upside down nor horizontally. Push refrigerator in an upright position using its roller feet.

INSTALLATION

To fix stably, the appliance must be placed on a flat and solid surface. It should not be laid on any soft material. Choose a well-ventilated place. A space of at least 5cm must be left at the sides and 10cm at the back of the refrigerator. Choose a location where there is no heat source. Keep the refrigerator away from direct sunlight or other appliance producing heat, choose a dry and well-ventilated place where there is no damp air.

TEST

Clean the parts of the refrigerator with lukewarm water with a soft cloth or with a neutral detergent with clear water, then wipe dry. Notes: Turn the thermostat knob on the "3" position and turn on electricity. The compressor and the light inside the refrigerator begin to work. Close the door and wait 30 minutes. When the refrigerator operates for a period of time, the temperature controller will automatically set.

TEMPERATURE CONTROL

The temperature in the refrigerator compartment and in the freezer compartment is controlled by the temperature controller installed on the right side of the refrigerator compartment. Turn the thermostat knob to regulate the temperature inside the refrigerator. The marks on the knob do not relate to the degrees of temperature but the temperature grades from "0" to "5". The first grade corresponds to OFF, on the refrigeration and the 5th grade corresponds to the lowest temperature the refrigerator can produce. Turn the knob from "1" position to "5" position, the temperature decreases continuously. Set the thermostat knob to "2-3" position for normal use.

STORAGE OF FOOD

How to Use the Freezer Compartment

- Put fresh food, such as fish or meat, into the freezer to save their taste and nutrient
- Wrapped food has to be frozen in aluminium paper or cellophane paper or in airtight plastic boxes
- Do not put fresh food directly in contact with frozen food
- Place frozen food in the freezer as soon as possible
- Never re-freeze a defrosted product.

How to Use the Refrigerator Compartment

- Eggs have to be put in the eggs' rack, bottles in the bottles' rack, etc.
- Fruits and vegetables to be put in the salad crisper.

Placement of Food

- Do not overfill this will offset performance
- Do not place hot food in your refrigerator/freezer.

DEFROSTING

When the refrigerator is working for a long time, the inner surface of the freezer will be covered with a layer of frost. It may raise the electricity consumption and decrease the performance. You should defrost your freezer once a month.

When defrosting, turn off the power, open the door and remove frozen foods, to a cool place. Use a plastic spatula to dislodge the frost. Then remove the frost, wipe the inside of your freezer with a soft, dry cloth.

Notes: Never use metal tools when defrosting your freezer.

GENERAL INSTRUCTIONS FOR CARE AND MAINTENANCE

The refrigerator should be cleaned once a month. Before cleaning, the electric plug must be removed from the power supply.

Wipe the inside and the outside of the refrigerator with a wet soft cloth.

If it's too dirty, clean with a soft cloth with neutral detergent, then remove the moisture with a dry soft cloth.

If you leave the refrigerator idle for a long time, proceed as follows:

- Disconnect the refrigerator from the electric power supply
- Remove all food
- Clean and dry the inside as instructed in the direction given above, for cleaning
- Leave the doors open to prevent any unpleasant smells while the refrigerator is not in use.

 
Cleaning

When cleaning the refrigerator the electric plug must be removed from the power supply. Use water or a non-abrasive detergent on a soft cloth and remove the moisture with a dry soft cloth. Remember to clear the defrost drain at the back, just above the glass cover.

Replacing the light bulb

If the Internal light needs replacing, disconnect then reconnect the device. If the light is still not working, check if the light bulb is correctly fitted. If there is still no light, it is necessary to change the light bulb. Use a 220-240V-, 10W light bulb.

- Disconnect the appliance
- Open the light cover(1)
- Undo the defective light bulb anti clockwise
- Screw the new bulb clockwise

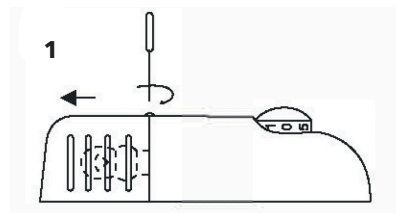

TROUBLESHOOTING

If your device shows the other symptoms that those described above, please call the service after sale of the shop retailer.

Problem	Cause	Solution
The appliance does not work	There is no power supply	Check the plug connecting it to another appliance, or verify that the appliance is connected to the plug
	The fuse doesn't work	Replace the fuse
The appliance makes a lot of noise	The appliance is too close to the wall, or is not stable, or the accessories inside the refrigerator are placed in the wrong position	Stabilize the base of the refrigerator by adjusting the position of the feet, take away the device from the wall, place the accessories correctly inside the refrigerator
The appliance doesn't cool enough	The door is too frequently opened or was left open for a long time	Close the door and do not open it repeatedly
	The refrigerator is too close to the wall	Take away the device from the wall to help the ventilation
	The refrigerator is too full	Remove some food
	The temperature is badly adjusted	Turn the knurl of regulation of temperature to "3" or more
There are smells in the appliance	Food has gone off inside the refrigerator	Throw away obsolete food and wrap other food
	The inside of the device needs to be cleaned	Clean the inside of the refrigerator

The following symptoms are not breakdowns:

- The noise of the cooling liquid which circulates in pipes can be heard, this is normal
- The humidity on the surface outside of the device during the wet seasons is not a problem to the device, you just need to wipe it with a dry soft cloth
- The compressor and the condenser can warm more during the periods of strong heat
- The frame of the door is a bit warm; it means that the condenser works to evacuate the humidity of air.

TECHNICAL SPECIFICATIONS

Reference:	HUS-RET135 (RD, BK,WH)
Rated voltage:	220-240V
Dimensions:	H895xW545xD585mm
Net weight:	28kg
Total volume:	118L
Lamp power:	10W
Climate type:	ST
Refrigerant:	22g
Refrigerant:	R600
Foaming insulation:	CYCLOPENTANE



The This marking indicates that this product should not be disposed with other household wastes throughout EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please us the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Notes:

Notes:



AUSTRALIA

Arisit Pty Ltd (AUS)
40-44 Mark Anthony Drive
Dandenong South, Victoria 3175
Email: arisit.warranties@arisit.com

NEW ZEALAND

Arisit Pty Ltd (NZ)
1A Howe Street
Newton, Auckland 1145
Email: sales2@aristonappliances.co.nz

HUSKY[®]